

## Upper and lower limit setting & cancellation

### Upper limit

Adjust the height of the desktop to the highest height required, firstly briefly pressing the up and down keys once, then keeping the up key, quickly release the down key, and then press the key three times every 1s, and you hear the upper limit setting is completed with a beep.

**Cancel the upper limit**Raise the desktop to the highest height currently set, and repeat the above setting steps.

### Lower limit

Adjust the height of the desktop to the lowest height required, firstly briefly pressing the up and down keys once, then keeping the down key, quickly release the up key, and then press the up key 3 times every 1s, and you hear the lower limit setting is completed with a beep.

### Cancel the lower limit

Lower the desktop to the bottom height currently set, and repeat the above setting steps.



### Notice

1. This function is currently only supported in TC15S/TC16P series control boxes.
2. After setting the upper and lower limits, if you perform a reset operation, the desktop will still reach the lowest height of the mechanical structure. For example, a desktop with a number display of 29-40 Inches will display as 29 inches after reset. When the desktop reaches the set height, it will beep. If the lower limit position is not cancelled, the desktop can only be lowered to the limit height when lowering the desktop again.