









Office Furniture Distributors 1 888 648-3635

Model Number BT839


Assembly instructions

- A**  ×4
- B**  ×4
- C**  ×4
- D**  ×4
- E**  ×4
- F**  ×1




- 1. Back**
- 2. Left Armrest**
- 3. Right Armrest**
- 4. Seat**
- 5. Control Mechanism**
- 6. Cylinder Column**
- 7. Base**
- 8. Castor**

1

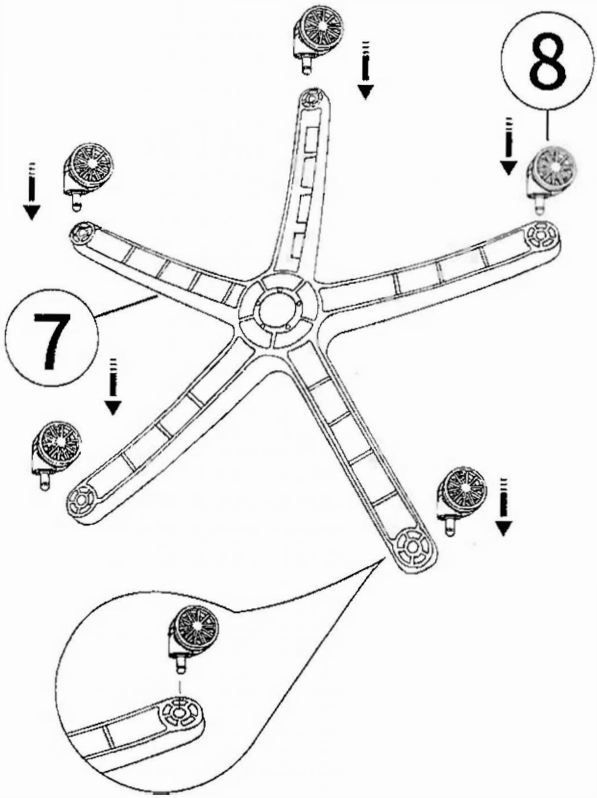

2

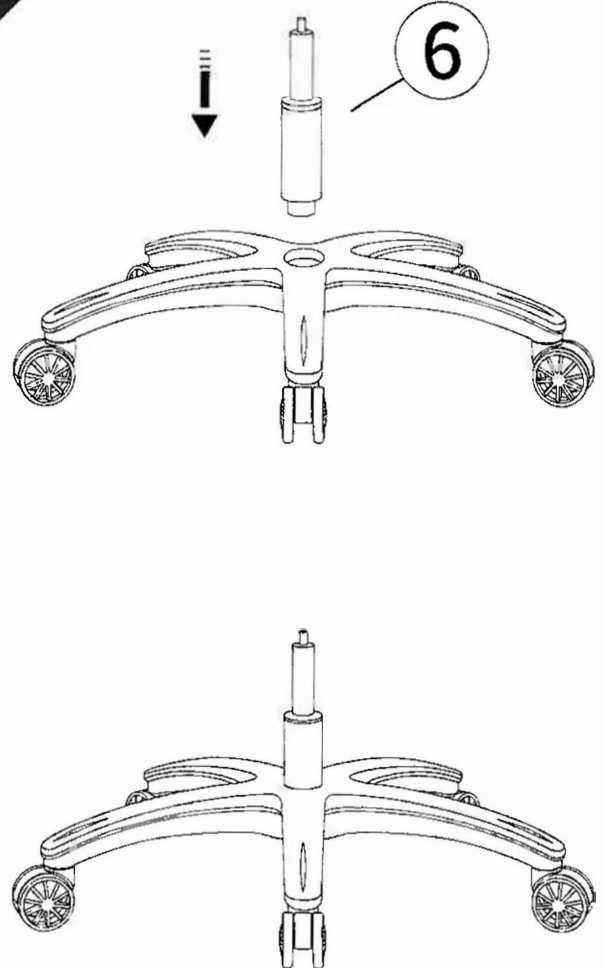

Very Important to attach back to the Arms first in step 3, and do not tighten until starting the screws in Step 4, attaching to the bottom of the seat. Much easier to complete

3

4

5

6