
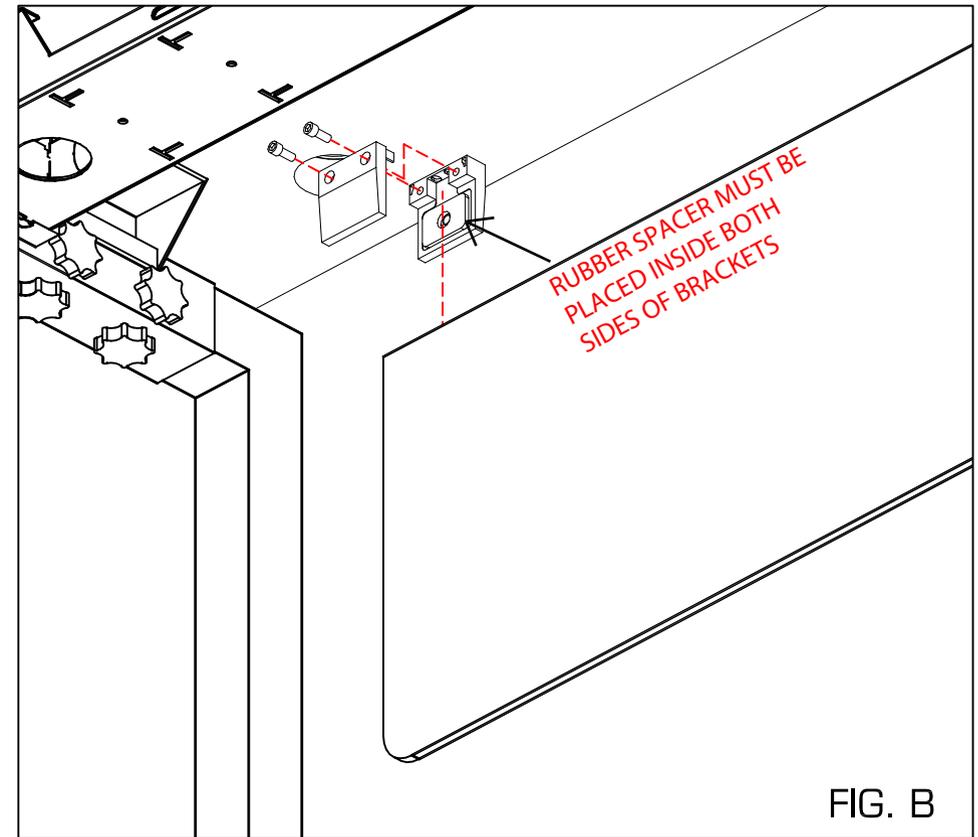


BENCH IT MODESTY SCREEN

PLEASE NOTE: RUBBER SPACER IS TO BE ATTACHED INSIDE ON BOTH SIDES OF BRACKET

1. ATTACH SCREEN BRACKET TO UNDERSIDE OF WORKSURFACE USING HARDWARE PROVIDED. (SEE FIG. A)
2. REPEAT FOR OTHER SIDE OF WORKSURFACE. IF SCREEN IS OVER 48" 3 BRACKETS ARE REQUIRED, MIDDLE BRACKET WILL BE CENTER ON THE BACK EDGE OF THE WORKSURFACE.
3. PLACE SCREEN INTO THE ATTACHED HALF OF THE BRACKET THEN INSERT 2ND HALF OF BRACKET INTO THE FIRST AND THEN SECURE TOGETHER USING PROVIDED HARDWARE. (SEE FIG. B)

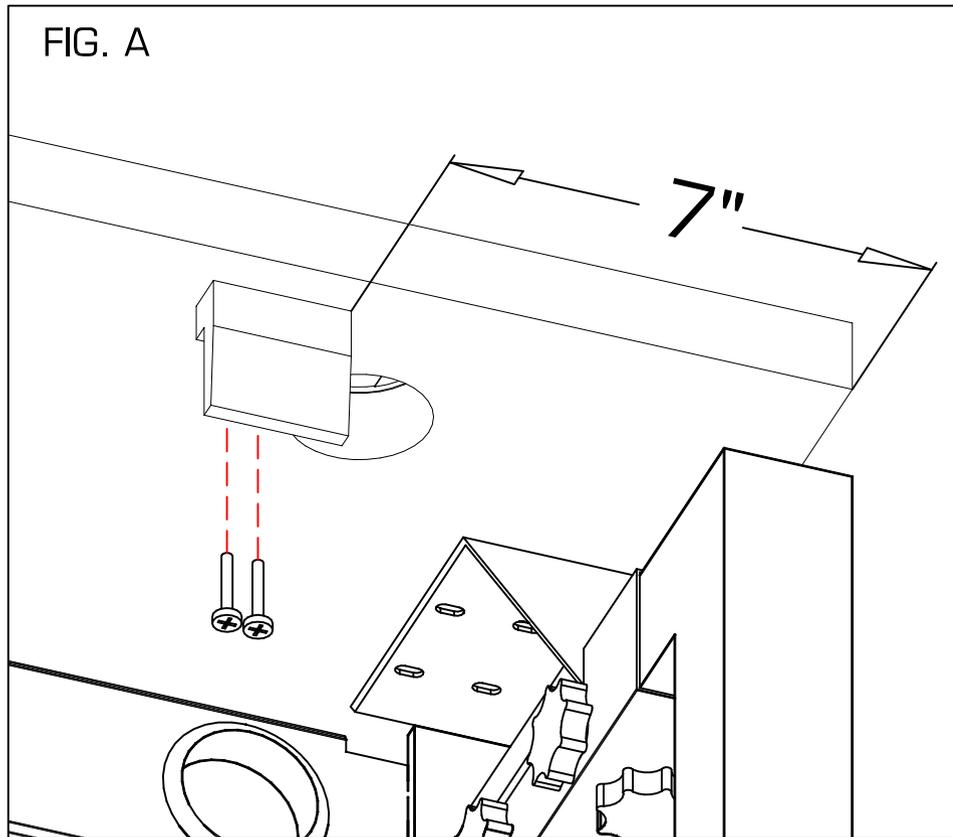

4. BELOW SHOW COMPLETED ASSEMBLY.

