



(1) N14

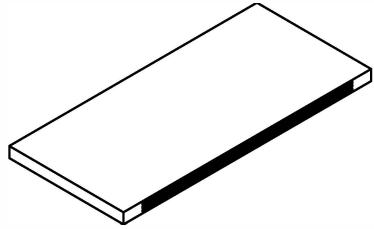


1PC

(E0) Wood Screw

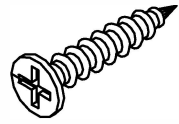


14PCS+2

(2) Ball Bearing Slide

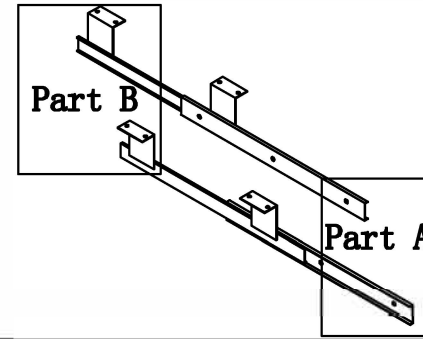


2PCS


STEP 1

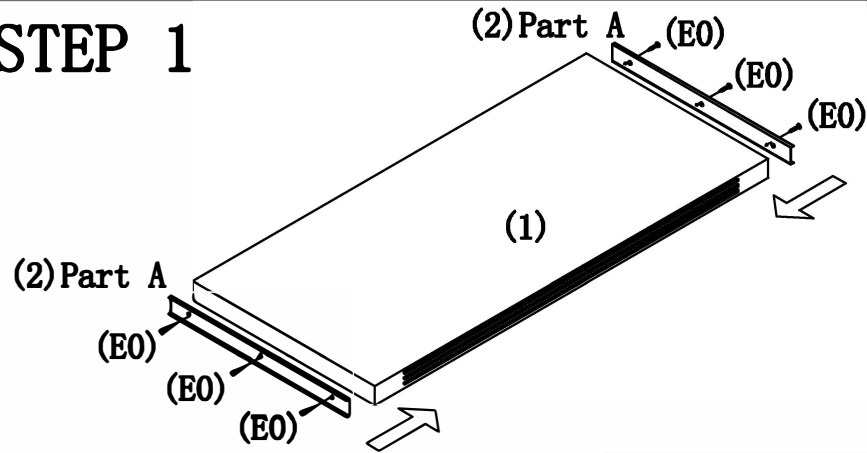

STEP 2

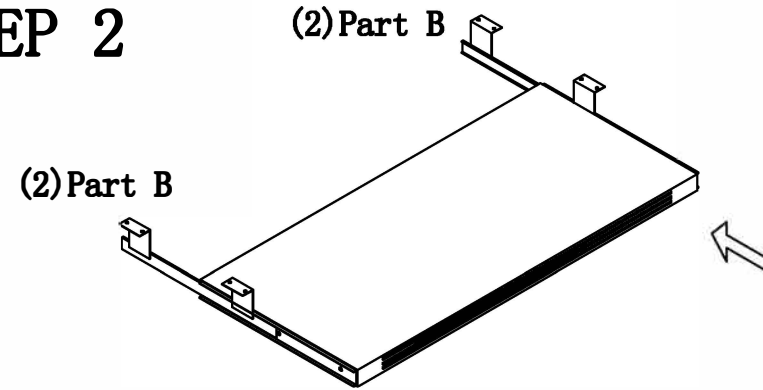

STEP 3

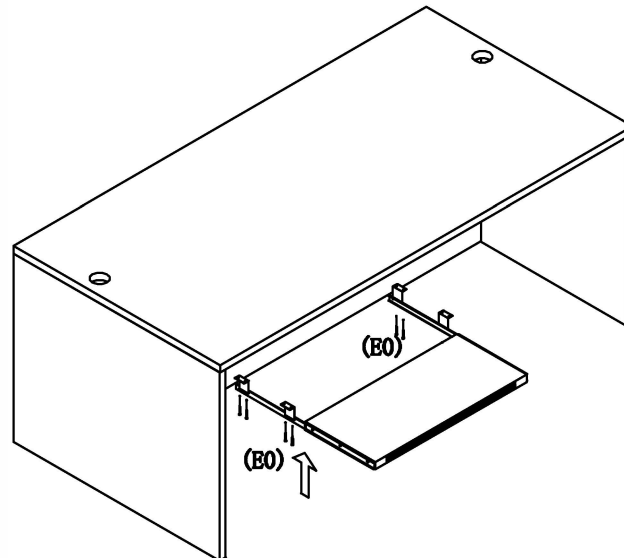

it.
office furniture distributors

KEYBOARD TRAY
N14

Always lay components on a clean, soft-cushioned surface during assembly.