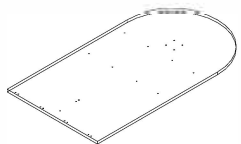








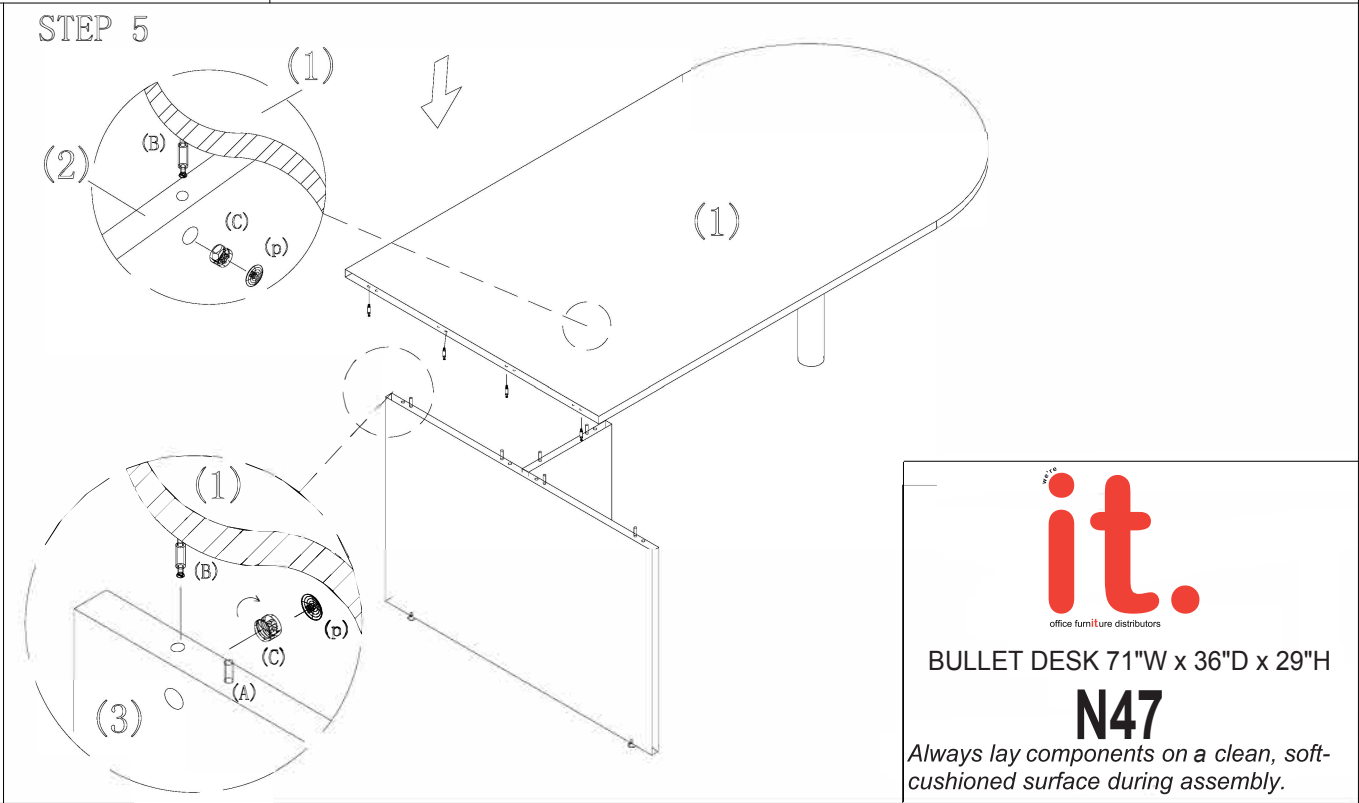
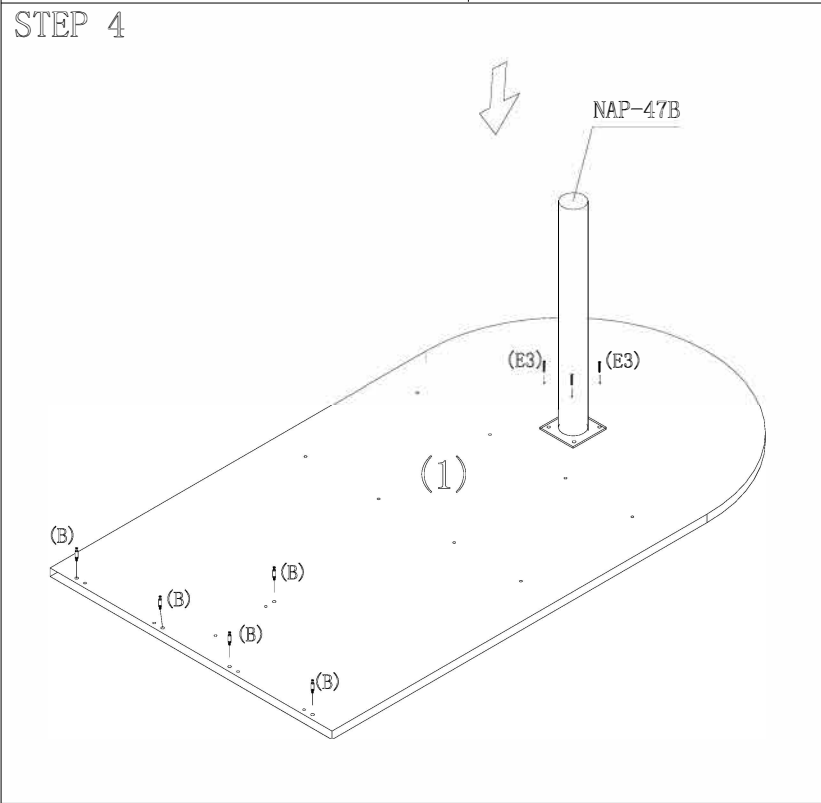
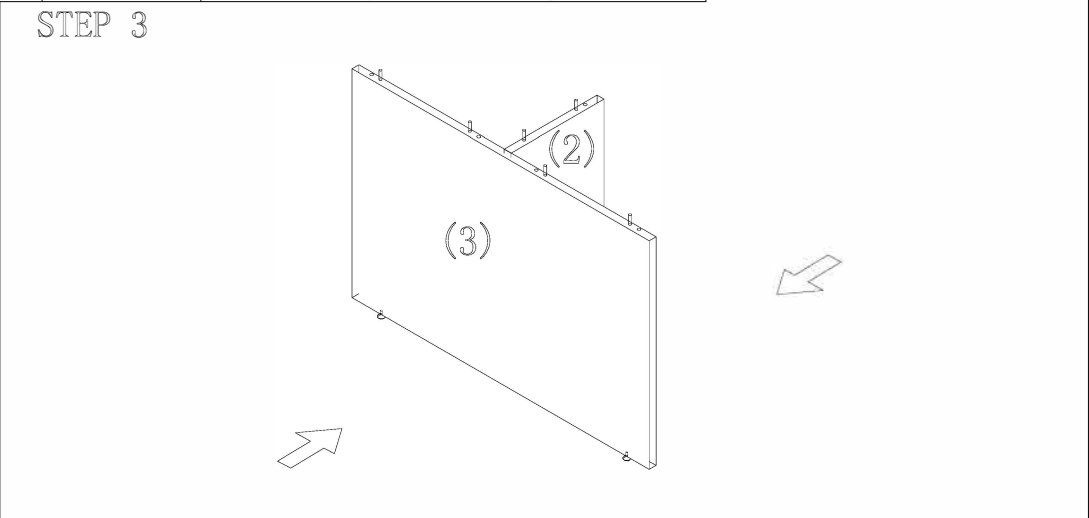
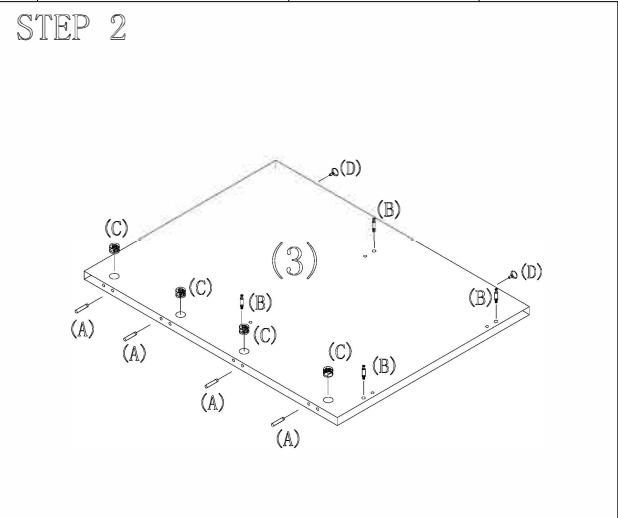
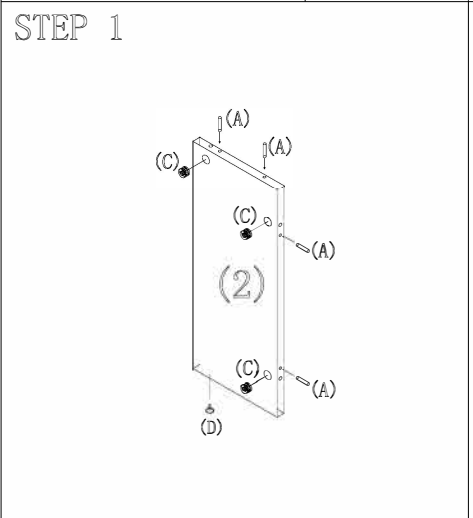


(1) Top  1PCS	(2) End Panel  1PCS	(3) End Panel  1PCS	(A) Dowel  8PCS+1	(B) Cam Pin  7PCS+1	(C) Cam Lock  7PCS+1	(D) Leg Leveller  3PCS	(p) Cam Cover  7PCS+1	(E3) Wood Screw  8PCS+2
--	---	--	---	--	--	--	--	--



it.
office furniture distributors

BULLET DESK 71"W x 36"D x 29"H

N47

Always lay components on a clean, soft-cushioned surface during assembly.